

clek

How to remove and replace the
Foonf/Flo fabric

Remove Headrest

Step 1

Locate the Troubleshooting Tool behind the manual on the back of the car seat, as shown in **Figure 1**.

Step 2

Raise Headrest to highest position by pressing and holding Headrest Adjuster button while lifting up on Headrest.

Step 3

Insert Troubleshooting tool into the small hole in the front of the Headrest Guide on the right side of the seat when you are behind it, as shown in **Figure 2**.

Step 4

Push in on the Troubleshooting Tool and the Headrest Adjuster button and hold both in while pulling up on the Headrest.

NOTE: A paper clip or other small object may be used if the Troubleshooting Tool is not available.



Figure 1



Figure 2

Remove Seat Cushion

Step 1

Unfasten the locking tabs at the lower front edge of the seat cushion by pressing each tab in, as shown in **Figure 3**.

Step 2

Grasp Seat Cushion at the bottom front edge, then lift and pull forward as shown in **Figure 4**. Once the Seat Cushion releases, pull the Buckle through the Seat Cushion.



Figure 3



Figure 4

Remove Seat Cushion Cover

Step 1

Turn Seat Cushion over to locate the Seat Cushion Cover attachments, as shown in **Figure 5**.

Step 2

Use your thumb to push inward on each Seat Cushion Cover attachment one at a time to release the cover from the Seat Cushion, as shown in **Figure 6**.

Step 3

Remove Seat Cushion Cover from Seat Cushion and set aside, as shown in **Figure 7**.



Figure 5



Figure 6



Figure 7

Remove Side Panels

Step 1

Locate the three (3) screws securing each side panel as shown in **Figures 8, 9 and 10**.

Use a Phillips screwdriver to remove all three (3) screws from each side panel.

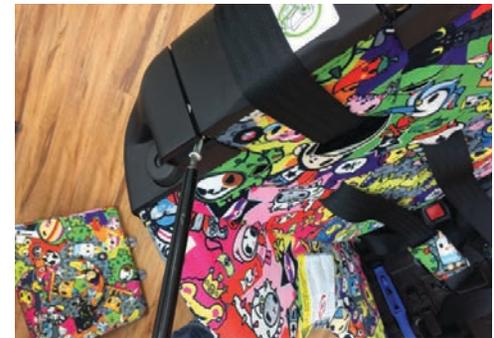


Figure 8

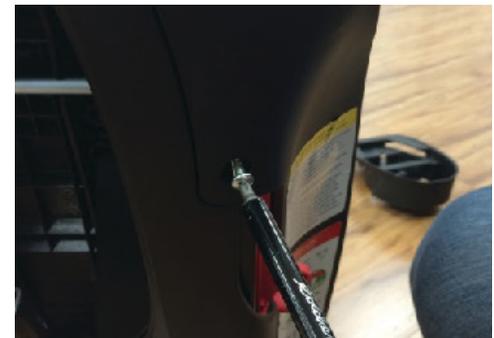


Figure 9



Figure 10

Step 2

For each side panel, grasp the bottom edge and pull panel away from car seat as shown in **Figure 11**.

Work from bottom to top to release entire side panel.

Step 3

Lift panel off of Headrest Guide as shown in **Figure 12** and set aside.

NOTE: It may be necessary to wiggle the panel gently around the Headrest Guides.

IMPORTANT: Never pull top of panel sideways when completing side panel removal. Headrest guides may be damaged by sideways force.



Figure 11



Figure 12

Detach Shoulder Harness Straps

Step 1

Loosen Harness to largest size.

Step 2

Remove Top Tether from storage:

- Remove Instruction Manual and Tether belt from back of seat. Pull in and hold retention spring on Tether Hook, then remove hook from storage bar.

Step 3

Remove Shoulder Harness Access Panel from back of car seat:

- Twist the Access Panel lock counter-clockwise as shown in **Figure 13** and pull to remove as shown in **Figure 14**.



Figure 13



Figure 14

Step 4

Remove loops at ends of Shoulder Harness Straps from Metal Harness Plate by sliding straps out through slot in Metal Harness Plate as shown in **Figure 15**.

NOTE: Take care to keep Metal Harness Plate away from base of seat to prevent it from falling inside the base.

Step 5

From front of car seat, pull Shoulder Harness Straps out of seat back as shown in **Figure 16**.

IMPORTANT: Take note of which harness strap slots were used for reassembly.



Figure 15



Figure 16

Remove Back Cover

Step 1

Unhook fabric along the edge of car seat frame as seen in **Figures 17 and 18.**

Step 2

Pull cover away from velcro as seen in **Figure 19.**



Figure 17



Figure 18



Figure 19

Step 3

Pull Top Tether through back cover as shown in **Figure 20**.

Step 4

Unhook small plastic connector clips from seat shell as shown in **Figures 21 and 22**.

NOTE: It may help to use needle nose pliers to remove clips.

Step 5

Remove back cover from seat and set aside.



Figure 20



Figure 21



Figure 22

Remove Headrest Cover

Step 1

Remove back panel from the Headrest.

Step 2

Unhook fabric from Headrest, as shown in **Figure 23**.

Step 3

Remove Headrest cover and set aside.

IMPORTANT: NEVER detach the black EPP foam from the car seat Headrest. Contact customer service at: 1-866-656-2462 if the foam is damaged during cover removal.



Figure 23

Install Back Cover

Step 1

Position back cover over back of car seat.

Step 2

Push Top Tether through cover as shown in **Figures 24** and **25**.

IMPORTANT: Ensure tether remains flat and untwisted.

Step 3

Smooth cover along back of seat and ensure all slots line up between the car seat shell and the back cover.

Step 4

Position back cover around Headrest Guide as shown in **Figure 26**, and attach black clip to frame.



Figure 24



Figure 25



Figure 26

Step 5

Follow along the edges of the seat frame and attach all clips and fabric slits as shown in **Figures 27** and **28**.



Figure 27

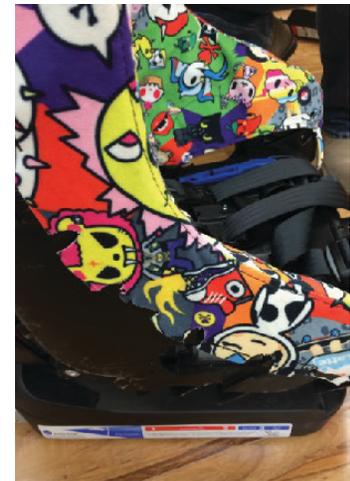


Figure 28

Step 6

Push small plastic connector clips through seat shell as shown in **Figures 29** and **30**.

NOTE: It may help to use needle nose pliers.

Step 7

Pull clips through seat frame and twist slightly, as shown in **Figure 31**, to anchor the back cover to the seat.

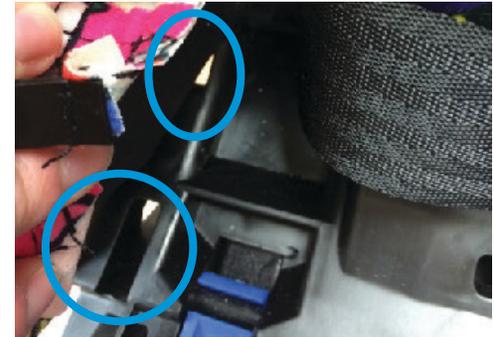


Figure 29



Figure 30



Figure 31

Attach Shoulder Harness Straps

Step 1

Adjust back cover around bottom end of Shoulder Harness Straps, taking care that the Shoulder Harness Straps are flat.

Step 2

Thread Shoulder Harness Straps through appropriate Shoulder Harness Slots, as shown in **Figure 32**.



- **Rear-Facing:** The Shoulder Harness Straps must be through the Shoulder Harness Slots at or below and closest to the child's shoulders.



- **Forward-Facing:** The Shoulder Harness Straps must be through one of the top three (3) sets of Shoulder Harness Slots at or above and closest to the child's shoulders.

Route Shoulder Harness Straps under bottom of seat back cover, as shown in **Figure 33**.

Step 3

Attach the Metal Harness Plate to the loop closer to the end of the Shoulder Harness Strap by sliding Harness Strap into slot in Metal Harness Plate as shown in **Figure 34**.



Figure 32



Figure 33



Figure 34

Step 4

Check that both Shoulder Harness Straps are attached to the Metal Harness Plate on the same loop while ensuring that each Shoulder Harness Strap is completely inside the slot in the metal Harness Plate as shown in **Figure 35**.

Step 5

Align bottom of Shoulder Harness Access Panel with opening in seat back as shown in **Figure 36**, and snap into place.

Lock Access Panel in place by twisting the Access Panel Lock clockwise, as shown in **Figure 37**.



Figure 35



Figure 36



Figure 37

Step 6

Store the Top Tether in the Shoulder Harness Access Panel as shown in **Figure 38**.

Step 7

Verify that Top Tether is routed through back cover and that Shoulder Harness Straps are flat and without twists, as shown in **Figure 39**.



Figure 38



Figure 39

Install Side Panels

Step 1

Place side panel over Headrest Guide as shown in **Figure 40**.

Step 2

Working from top to bottom, snap panel on to seat shell as shown in **Figure 41**.

NOTE: Press upper portion of side panel toward the seat back first, then snap remainder of panel in by pressing toward side of seat.

IMPORTANT: Ensure that metal plate at bottom end of harness strap is positioned against seat shell and under side panel, as shown in **Figure 42**.



Figure 40



Figure 41

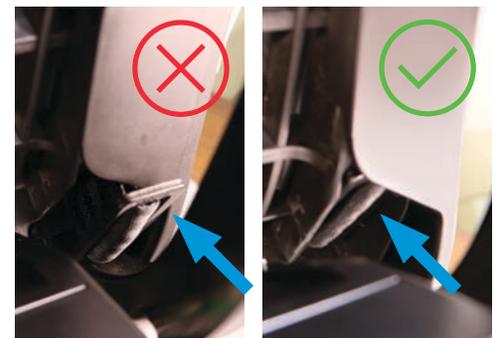


Figure 42

Step 3

Use Phillips screwdriver to secure side panel using the three (3) screws, as shown in **Figures 43, 44, and 45.**

IMPORTANT: Do not overtighten screws. Overtightening, or use of electric tools, may strip the inserts that the screws are secured to.

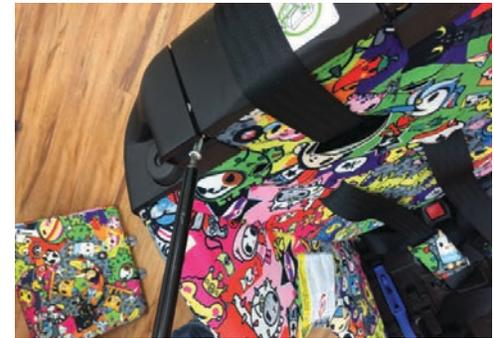


Figure 43

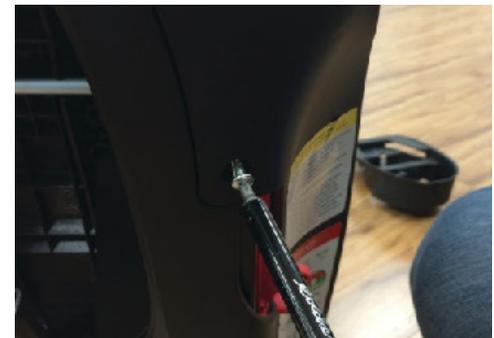


Figure 44



Figure 45

Install Headrest Cover

Step 1

Position Headrest Cover in place over EPP foam.

IMPORTANT: Take care to place cover completely over EPP foam when positioning the Headrest cover.

Step 2

Attach Headrest cover to Headrest as shown in **Figure 46**.

Step 3

Attach back panel of Headrest.



Figure 46

Install Headrest

IMPORTANT: The Headrest **MUST** be installed on the car seat prior to use.

Step 1

Locate the Troubleshooting Tool used to remove the Headrest. Remove from storage on Shoulder Harness Access Panel if needed. See Page 1.

Step 2

Use Troubleshooting Tool to install Headrest:

- From back of car seat, place the Headrest support rods into the Headrest Guides on top of seat back, as shown in **Figure 47**.
- Place the metal pin located on the end of the Troubleshooting Tool into the pinhole on the Headrest Guide located on the right side of the seat (when facing the back of the seat,) as shown in **Figure 48**.
- While pressing in on Troubleshooting Tool, push Headrest down until Headrest Support Rods slide down into the seat.

Step 3

Press the Headrest Adjuster button located on the left side of the seat (when facing the back of the seat) and push the Headrest down until it locks in to place.



Figure 47

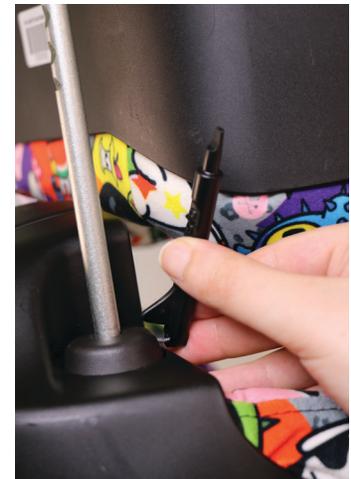


Figure 48

Step 4

Adjust Headrest by pressing and holding Headrest Adjuster button while raising or lowering the Headrest to the proper height for child's size.



- **Rear-Facing:** The top of the child's head must be at least 1 in. (1 cm) below the top of the car seat's Headrest.



- **Forward-Facing:** The tops of the child's ears must be below the top of the car seat's Headrest.

IMPORTANT: The bottom of the Headrest must always be at or above the Harness Slots in use. See car seat instruction manual for further information.

Step 5

Store Troubleshooting Tool in storage spot on Shoulder Harness Access Panel.

Install Seat Cushion Cover

Step 1

Place Seat Cushion Cover on a flat surface with Seat Cushion Cover attachments facing up.

Step 2

Place Seat Cushion onto Seat Cushion Cover, aligning the Seat Cushion with the Seat Cushion Cover attachments, as shown in **Figure 49**.

Step 3

Attach Seat Cushion Cover attachments to Seat Cushion by wrapping the Seat Cushion Cover sides around the Seat Cushion, and fastening each one as shown in **Figure 50**.



Figure 49



Figure 50

Install Seat Cushion

Step 1

Insert the Buckle through the slot in the Seat Cushion that matches the slot the Crotch Strap is through in the seat as shown in **Figure 51**.

Step 2

Insert the tabs on the back of the Seat Cushion through the slots in the pad and into the seat back at the back of the seat bottom. Push the locking tabs at the lower front of the Seat Cushion into the holes at the front edge of the seat by pressing down on the Seat Cushion near the front edge, as shown in **Figure 52**.



Figure 51



Figure 52

You're done!

If you have any further questions, please give us a call at: 1-866-656-2462.